
CONTENTS

| | Page |
|-----------------------------------------------|------|
| 1. Tools for work on engine | 4 |
| 2. Tools for work on transmission | 6 |
| 3. Tools for work on suspension etc. | 8 |
| 4. Tools for checking body dimensions | 9 |
| 5. Saab 92 tools which also fit Saab 93 | 10 |

List of special tools for Saab 93


| <i>Engine</i> | | <i>Page</i> |
|-----------------------------------------|-----------------------------------------------------------|-------------|
| 93-102 | Puller, distributor pinion | 4 |
| 93-103 | Puller, inner cover, distributor gear | 4 |
| 93-104 | Puller, outer cover, distributor gear | 4 |
| 93-105 | Puller, belt pulley | 4 |
| 93-106 | Assembly sleeve, inner cover, distributor gear | 4 |
| 93-107 | Assembly tool, outer cover, distributor gear | 4 |
| 93-110 | Lifting hook, power unit | 5 |
| 93-111 | Lifting hook, engine | 5 |
| 93-112 | Nut for indicator sleeve 92-41 | 5 |
| 93-113 | Pin for guiding piston pin into needle bearing | 5 |
| <i>Transmission</i> | | |
| 93-120 | Gearbox fixture | 6 |
| 93-120/1-9 | Accessories for 93-120 | 6 |
| 93-121 | Centring tool, disk | 7 |
| 93-122 | Spacers, clutch arms | 7 |
| 93-123 | Measuring tool, adjustment ring gear - pinion shaft | 7 |
| <i>Suspension and steering gear</i> | | |
| 93-130 | Hook wrench, ball joints | 8 |
| 93-131 | Hook wrench, steering gear | 8 |
| 93-132 | Spring press | 8 |
| 93-133 | Spring clamp | 8 |
| 93-134 | Screw press, rear axle bushing | 8 |
| 93-135 | Drift and dolly, side link bushings | 8 |
| 93-136 | Drift, front wheel bearings | 8 |
| <i>Body</i> | | |
| 93-150 | Diagonal measuring tool, floor | 9 |
| 93-151 | Fixing tool, front wheel housing wall | 9 |
| 93-152 | Fixing tool, power unit attachment points | 9 |

List of special Saab 92 tools which also fit Saab 93


| | | |
|----------|------------------------------------|----|
| 92-2 | Measuring tool, toe-in | 10 |
| 92-3 | Wheel puller | 10 |
| 92-5 | Ejector, drag rod ends | 10 |
| 92-19 | Hook wrench, rear axle seal | 11 |
| 92-21 | Hook wrench, front axle seal | 11 |
| 92-30&31 | Handles for tools | 11 |
| 92-33&34 | Pushers, rear wheel bearings | 11 |
| 92-37 | Pusher, dust cap, rear wheel | 11 |
| 92-41 | Sleeve for dial indicator | 11 |

SPECIAL TOOLS


1. Tools for work on engine

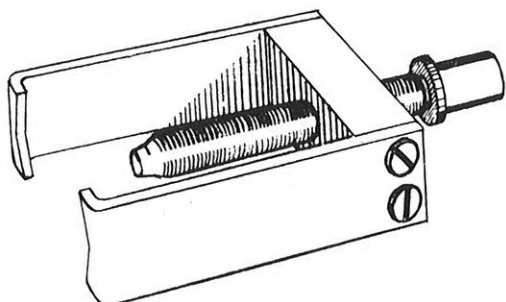


Saab 93-102 Puller for distributor pinion on crankshaft

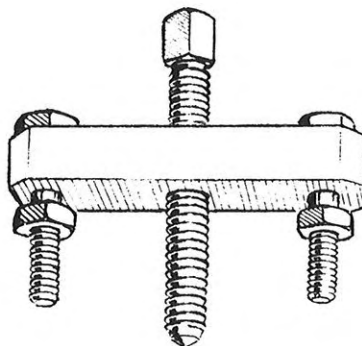


Saab 93-105 Puller for crankshaft belt pulley

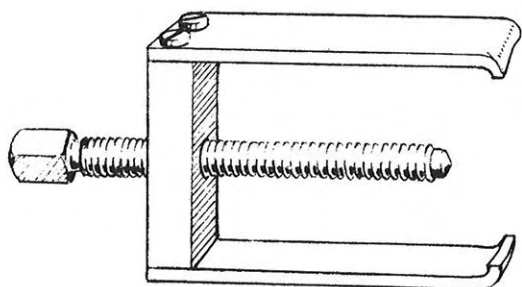


Saab 93-103 Puller for inner cover, distributor gear

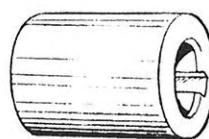


Saab 93-106 Tapered sleeve for installation of inner cover with seal ring, distributor gear

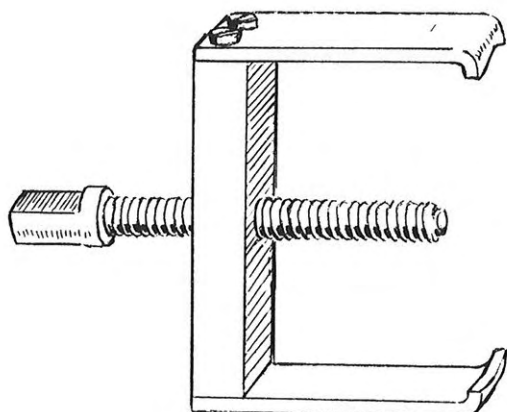


Saab 93-104 Puller for outer cover, distributor gear

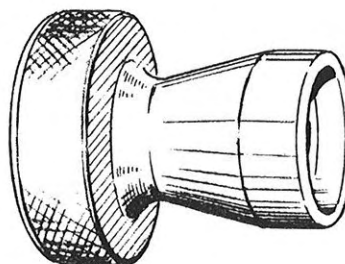


Saab 93-107 Tool for installation of outer cover distributor gear

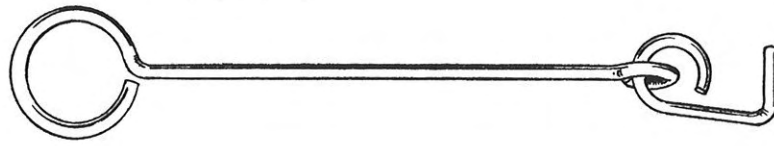


Saab 93-110 Hook for lifting power unit

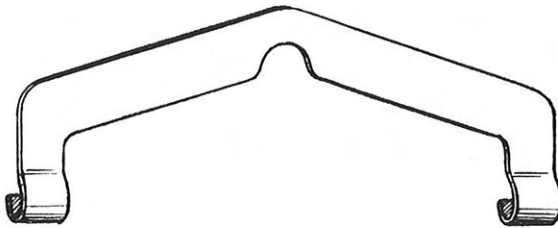

Saab 93-111 Hook for lifting engine

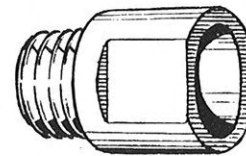


Saab 93-112 Nut for indicator sleeve
Used together with Saab 92-41 for
checking ignition timing

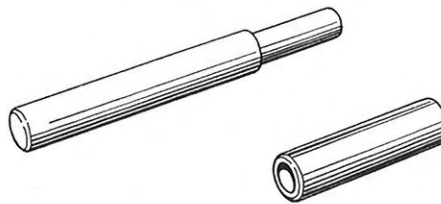


Saab 93-113 Pin to be used for guiding needle bearing when piston pin is pressed in


2. Tools for work on transmission

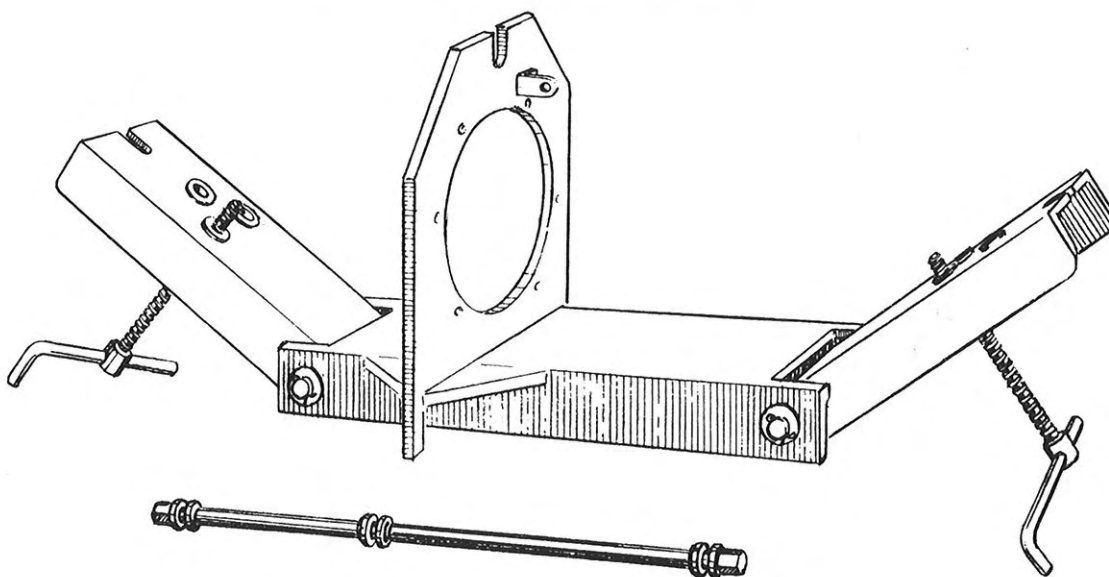


Saab 93-120 Fixture with press screws for work in gearbox

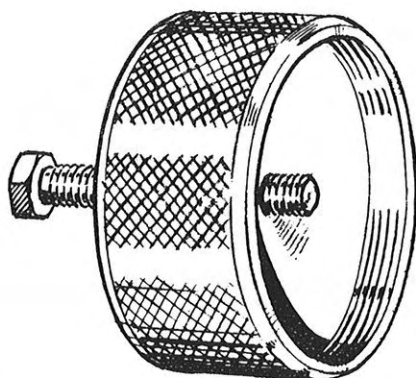

Saab 93-120/1 Puller for pinion shaft bearing

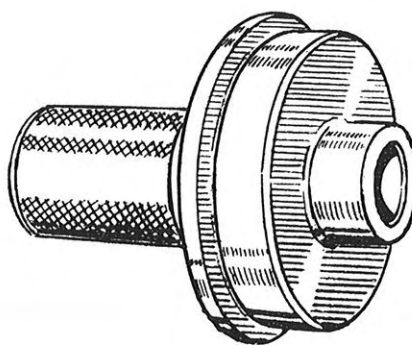


Saab 93-120/3 Guide tool for installation of main shaft etc.

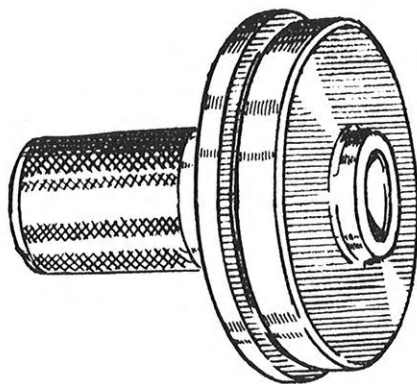


Saab 93-120/2 Guide tool for installation of pinion shaft. Also used for pressing in pinion shaft bearing.




Saab 93-120/4 Tool for pressing shaft out or in.

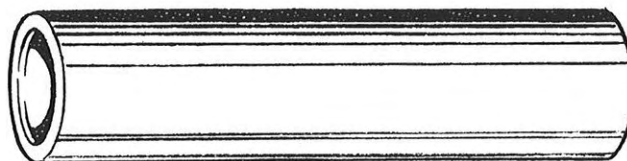


Saab 93-120/6 Tool for installation of bearings on pinion shaft etc

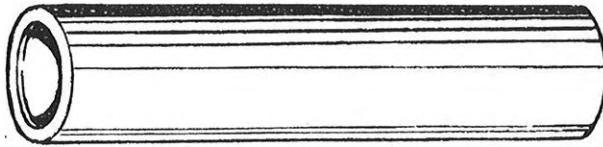


Saab 93-120/7 Tool for installation of bearings on main shaft etc.

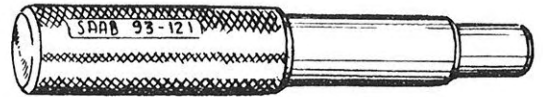


Saab 93-121 Tool for centering clutch disk.

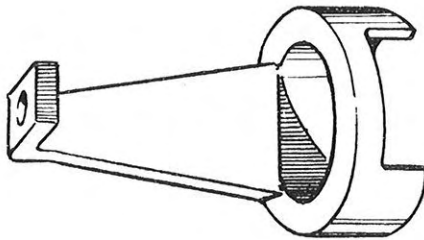


Saab 93-120/8 Tool for installation of countershaft ball bearings and gears.

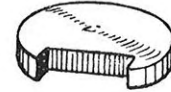


Saab 93-122 Three spacers to be used during removal or installation of clutch

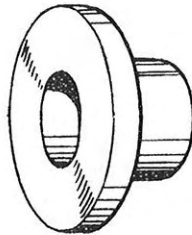

Saab 93-120/9 Tool for pressing bearings out or in.

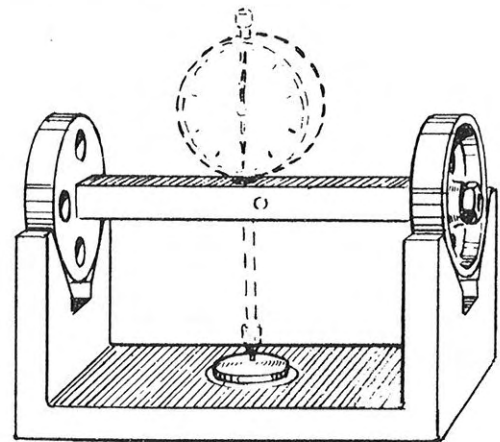


Saab 93-123 Measuring tool for adjustment of ring gear - pinion shaft. Used together with dial indicator.

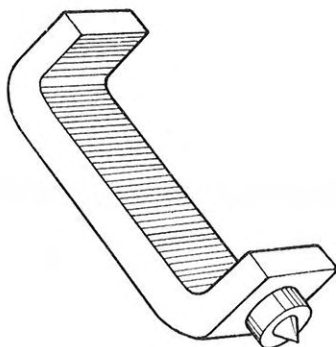


Saab 93-120/10 Pusher for countershaft


3. Tools for work on suspension etc.

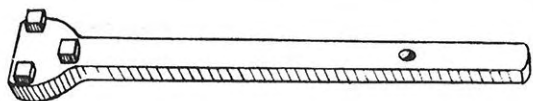


Saab 93-130 Tool for adjustment of ball joints, front suspension.

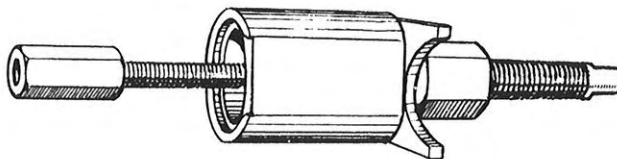


Saab 93-134 Tool for pressing rear axle bushing out or in.

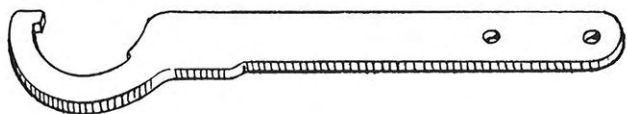


Saab 93-131 Two hook wrenches for inner ball joint, steering gear.

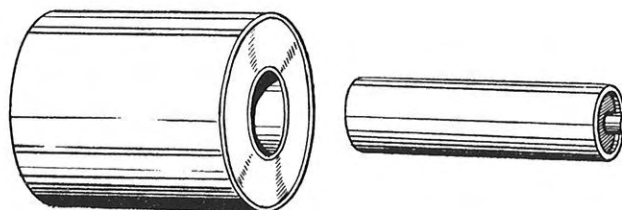


Saab 93-135 Tool and dolly for driving bushings in rear axle side links out or in.

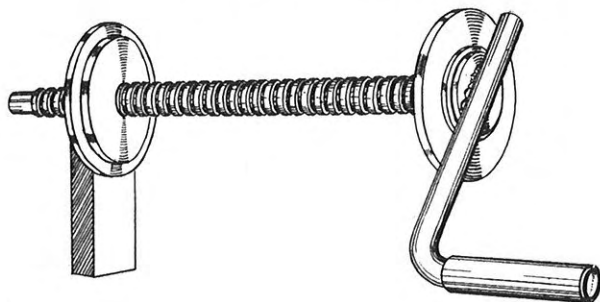

Saab 93-132 Tool for compressing coil springs before installing.

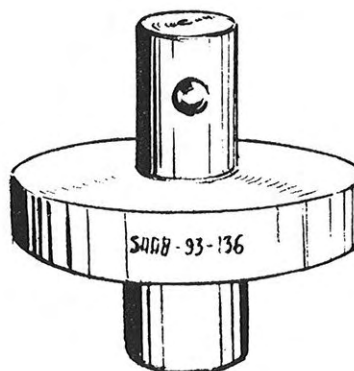


Saab 93-136 Tool for installation of front wheel bearings.

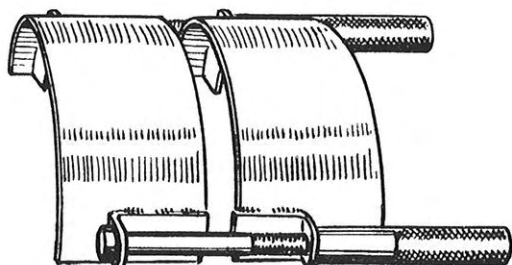


Saab 93-133 Spring clamp for holding coil springs compressed on removal or installation


4. Tools for checking body dimensions

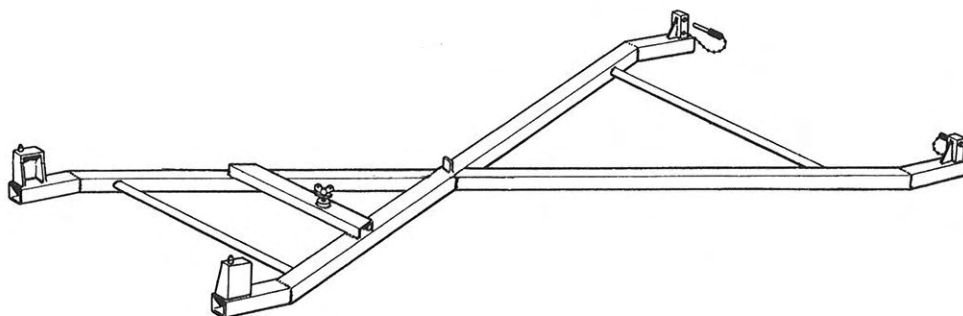

Saab 93-150 Diagonal measuring tool, floor.

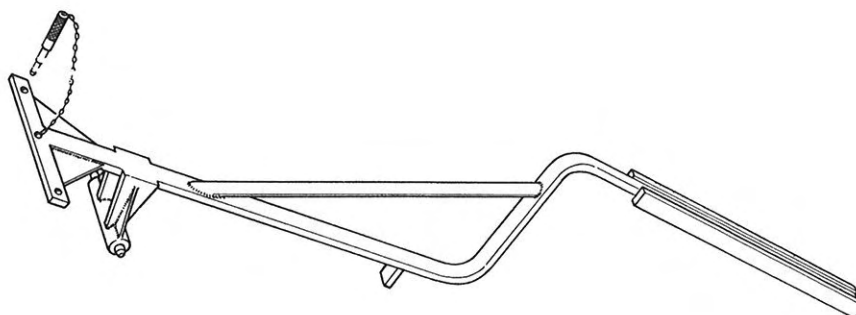


Saab 93-151 Fixing tool, front wheel housing wall

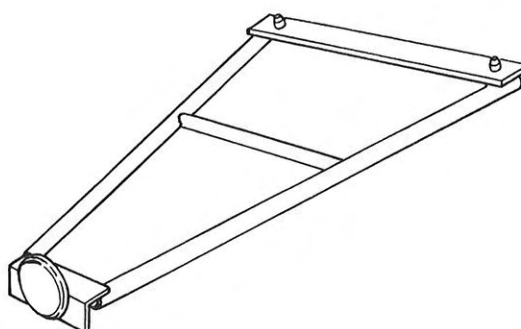


Saab 93-152 Fixing tool, power unit attachment points.


5. Saab 92 tools which also fit Saab 93

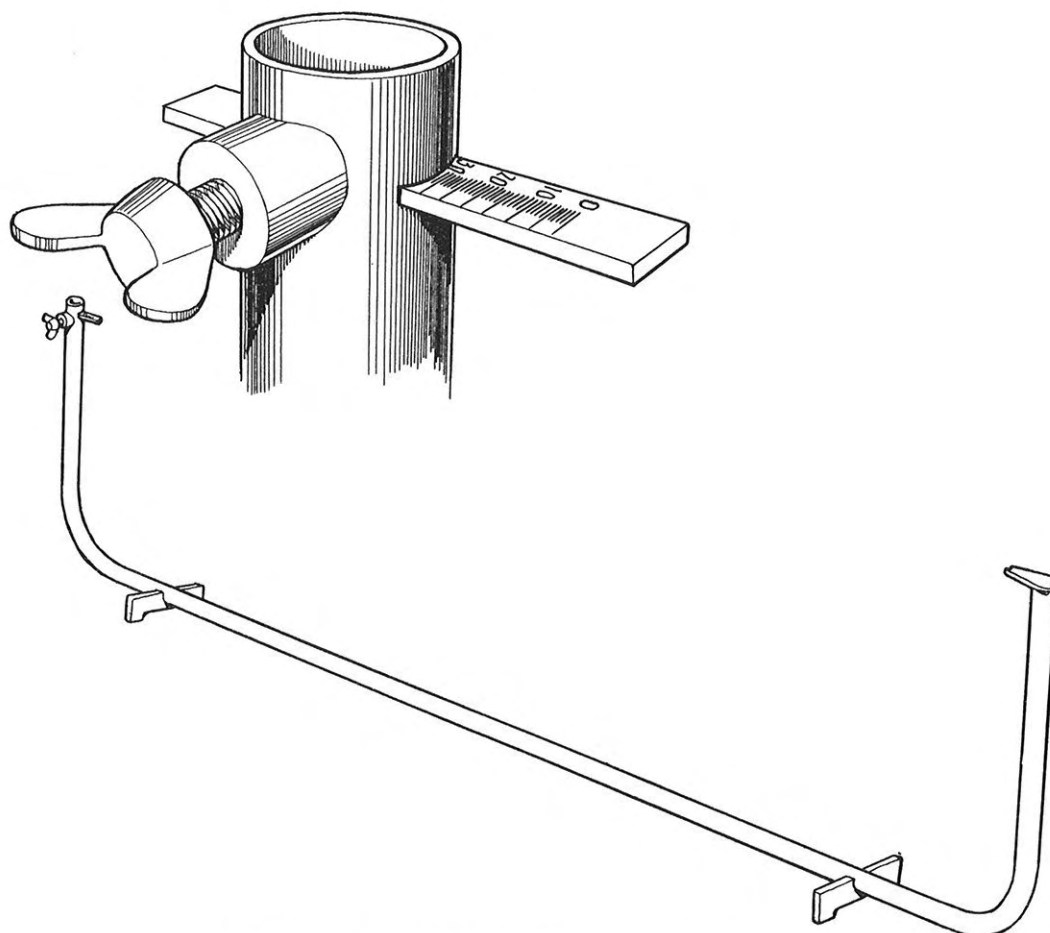


Saab 92-2 Tool for measurement of toe-in.

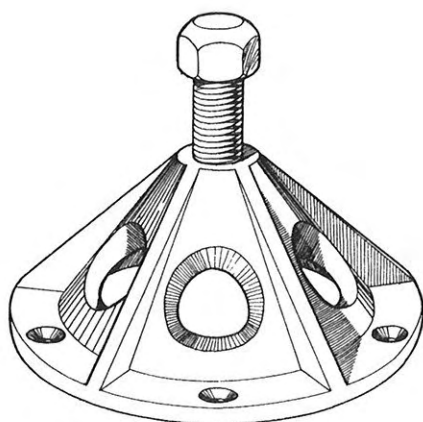


Saab 92-3 Wheel puller

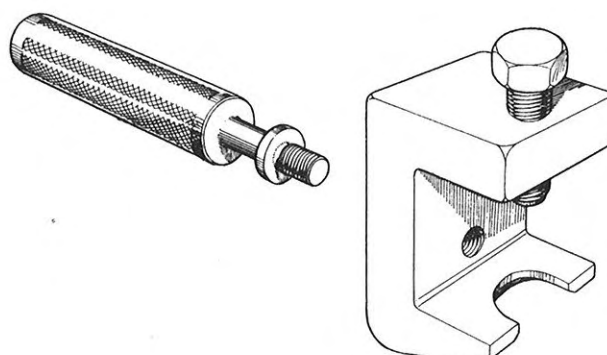



Saab 92-5 Tool for pressing out drag rod ends.

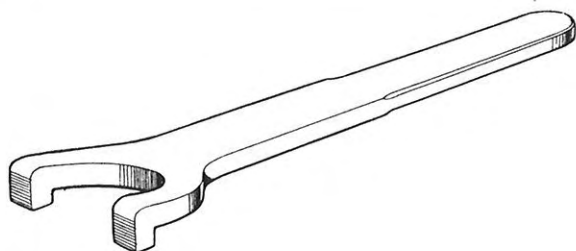


Saab 92-19 Hook wrench for shaft seal nut, rear wheel hub.

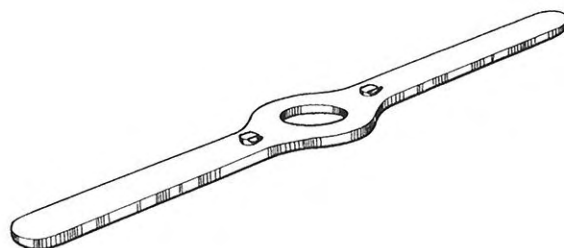


Saab 92-21 Wrench for shaft seal nut, front wheel, hub.

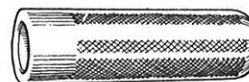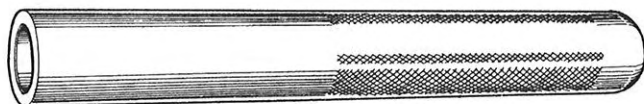

Saab 92-30 and 92-31 Handle for extending tools. Fit tools 93-126, 92-33, 92-34 and 92-37.

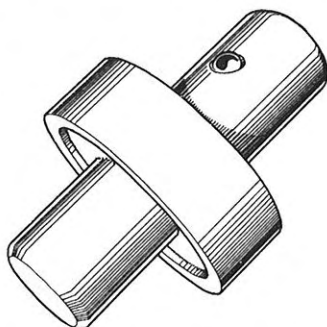


Saab 92-33 Tool for pressing rear wheel hub inner ball bearing out or in.

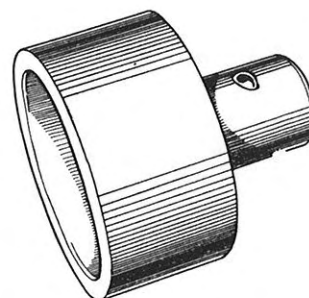

Saab 92-37 Tool for pressing on dust cap, rear wheel hubs.



Saab 92-34 Tool for pressing rear wheel hub outer ball bearing out or in. Can also be used for pressing in seal ring around inner drive shaft in differential case if shaft is removed.

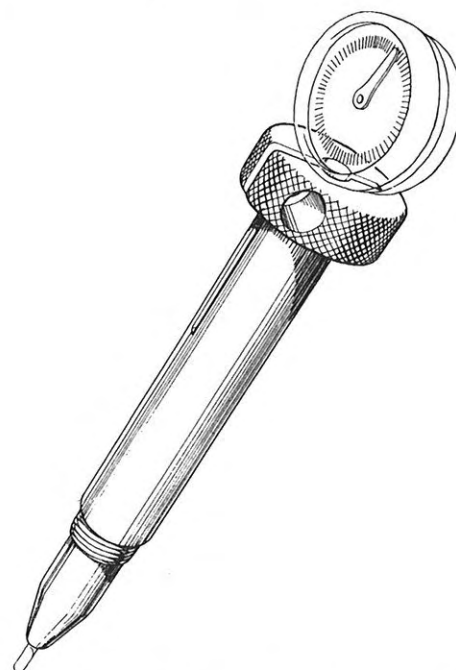

Saab 92-41 Sleeve for dial indicator when timing ignition. For Saab 93 used together with nut 93-112.